

# TM DeScaler



**MAINTENANCE**

RTU pH 7.0-8.0  
Truckmounted  
equipment and  
pressure washing  
maintenance solution

## Non-Acid Scale Remover

TM DeScaler is formulated especially for use in cleaning and conditioning of the water systems of a truckmounted cleaning machine or pressure washing system.

Using TM DeScaler on a routine basis will prevent the build-up of harmful hard water deposits, chemical residues, and scale.

- TM DeScaler is formulated especially for use in cleaning and conditioning of the water systems of a truckmounted cleaning machine or pressure washing system. Using TM DeScaler on a routine basis will prevent the build-up of harmful hard water deposits, chemical residues, and scale.
- TM DeScaler will clean out all of the internal parts, restore the efficiency of your water heating system and help keep your machine running at peak performance
- The non-acid formula is safer for your equipment, but more importantly is safer for the person performing the descaling operation than conventional acid descalers

### Directions:

Please read the full label directions before cleaning.

1. TM DeScaler is a concentrated formula that should be diluted prior to use. Always consult with equipment manufacturer's operations manual for specific directions in descaling.
2. For periodic maintenance and scale control: To routinely condition and clean the water system and remove small amounts of scale, chemical, and hard water build-up, add 1 quart of TM DeScaler to one gallon (1 part solution/4 parts water) in the mix tank of the machine and circulate through the water pump and heater. Flush thoroughly.
3. For Heavy scale and deposit removal: for removal of heavy deposits of hard water, scale, and chemical residue, mix one part solution with one gallon of water (one gallon of solution/ one gallon of water) in the mix tank. Circulate, then flush.
4. Activating the heater of the unit will allow TM DeScaler to work more rapidly.
5. The solution of TM DeScaler may turn blue as it works.
6. Allow TM DeScaler to sit in the unit for a period of time to aid in removing heavy deposits
7. The frequency and length of circulation will depend on machine hours, chemical used and hardness of water.
8. Always flush out TM DeScaler.



Available in: 1 Gallon; Case of 4 x 1 Gallon  
Part # 800-800

**HydraMaster**  
We've Got Your Back



www.hydramaster.com | 800.426.1301 | 425.775.7272  
sales@hydramaster.com