
56380588

240V

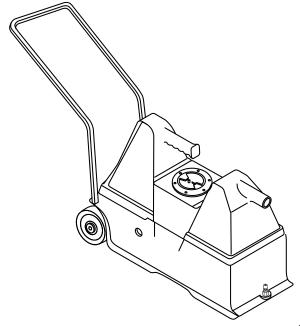

INFORMATION & OPERATING INSTRUCTIONS



Δ

CAUTION: DO NOT OPERATE MACHINE UNTIL YOU HAVE READ ALL SECTIONS OF THIS INSTRUCTION MANUAL



IMPROPER USE OF THE MACHINE WILL VOID THE WARRANTY

- 1. Always use a defoamer when foaming occurs to prevent vacuum motor damage.
- **2**. Connect the machine to a properly grounded outlet.
- **3**. Keep machine from rain, snow, and extremes in temperatures. Store the machine in a heated location.
- 4. Use approved chemicals only. NO SOLVENTS.
- **5**. Wear gloves or use rags when removing quick disconnects to prevent burns.
- **6**. Never use water above 130° F/54° C in the solution tank.
- 7. Never let the pump run while it is dry.
- 8. Use the machine indoors. Do not use outdoors.
- **9**. Use the machine to clean small areas do not attempt to clean room-size carpets.

IMPORTANT SAFETY INSTRUCTIONS

This machine is only suitable for commercial use, for example spot cleaning in hotels, schools, hospitals, factories, shops, and offices. This machine is not intended for normal residential housekeeping purposes.

NOTE: Read all instructions before using this machine.

When using any electrical appliance, basic precautions should always be followed, including the following warnings and cautions:



♠ WARNING!

To reduce the risk of fire, electric shock, or injury:

- Do not leave the machine unattended when it is plugged in. Unplug the unit from the outlet when not in use and before servicing.
- To avoid electric shock, do not expose to rain or snow. Use and store indoors.
- Do not allow to be used as a toy. Close attention is necessary when used near children.
- Use only as described in this manual. Use only the manufacturer's recommended attachments.
- Never add water over 130° F/54° C to the solution tank.
- Do not use with damaged cord or plug. If the machine is not working as it should, has been dropped, damaged, left outdoors or dropped into water, return it to a service center.
- Do not pull by the cord, use the cord as a handle, close a door on the cord, or pull the cord around sharp edges or corners. Do not run the machine over the cord. Keep the cord away from heated surfaces. To unplug, grasp the plug, not the cord.
- Do not handle the plug, the cord, or the machine with wet hands.
- Extension cords must be 12/3 and no longer than 50 feet. Replace the cord or unplug immediately if the ground prong becomes damaged.
- Do not put any object into openings. Do not use with any opening blocked; keep free of dust, lint, hair, and anything that may reduce air flow.
- Keep loose clothing, hair, fingers, and all parts of body away from openings and moving parts.
- Do not pick up anything that is burning or smoking, such as cigarettes, matches, hot ashes, or any health endangering dusts. Do not use to pick up flammable or combustible liquids such as gasoline or use in areas where these liquids may be present.
- Turn off all controls before unplugging.
- Use extra care when cleaning on stairs.
- Connect to a properly grounded outlet only.
- Use a defoamer at the first sign of foam, to prevent damage.
- Use the SpotMaster Duo to clean small areas. Do not attempt to clean room size carpets.
- Liquid ejected at the spray nozzle could be dangerous as a result of its temperature, pressure, or chemical content.

INSPECTION:

Carefully unpack and inspect the 56380588 for shipping damage. Each unit is tested and inspected before shipment. Any damage incurred during shipping is the responsibility of the carrier, whom you should notify immediately.

CLEANING SOLUTIONS:

Use only approved chemicals. Liquid cleaning detergents are recommended. Powdered chemicals may be used, but unless mixed thoroughly, they may cause a build-up in the pump, the lines, the quick couplers, etc. Regular use of strong acid concentration, as in citrus based cleaners, or strong detergent preparations, can damage the pump seals and/or other fittings, and are expressly warned against. A pH of between 5 and 10 is recommended. Damage caused by either strong acid or strong detergent will void the warranty.

MAINTENANCE:

Before each job, inspect the filters and gaskets to make sure they are clean and ready for use. The pump and vacuum do not require any maintenance. Clean the body with an all purpose detergent, and protect it with a common auto interior protectant. Lubricate the wheels and latches as needed.

Serial Number	·
Purchase Date	e:
•	one number of the distributor from whom you purchased

FEATURES:

Solution Tanks:

The 56380588 has the unique design feature of having two 1-gallon solution tanks. This allows you to have cleaning solution in one tank and clean water for rinsing in the other tank. Simply turn the valve on the machine to switch from one tank to the other. There is no need to empty your detergent tank, clean it, and refill it with water for the rinse cycle.

Vacuum Tank:

The vacuum tank holds more liquid than the total of both the holding tanks, so you can easily clean an area and rinse it without the need to empty your recovery tank. When you refill your holding tanks, simply remove the vacuum hose from the recovery tank and dump the water out through the vacuum inlet spout.



To prevent damage to the vacuum motor, do not let the water level in the recovery tank exceed 3/4 full. When moving the machine with water in any of the tanks, do not tip the machine past a 30 degree angle to avoid spilling water into the vacuum chamber and to avoid damaging the motor.

SET-UP:


- **1.** Open the latches and remove the recovery tank from the machine.
- 2. Fill the solution tanks -- in one tank add your diluted cleaning chemical and fill the second tank with clean water.
- **3.** Place the recovery tank back onto the base, and secure the latches. Make sure the screw-in access lid is in place, and tight.
- **4.** Attach the vacuum hose to the vacuum inlet on the recovery tank.
- **5.** Connect the solution line to the quick coupling on the rear of the SpotMaster base.
- **6.** Attach the cleaning tool to the 10' Vacuum Hose & Solution Hose Assembly.
- **7.** Turn the knob on the 3-way switch to the desired tank.
- **8.** Turn the rocker switch on. This will start both the pump and the vacuum.
- **9.** Press the lever on the tool to begin spraying.

NOTE: Initially it may take a few seconds for the solution to reach the spray tip. The tool will automatically suck up the sprayed solution as the tool passes over the wet area.

NOTE: When switching from one tank to the other tank, it may take a few seconds of spraying for the solution in the selected tank to reach the spray tip.

CLEAN-UP:

1. When finished with the job, disconnect the hoses from the SpotMaster, remove, empty, and rinse the recovery tank, then dump the water out of the water tanks and clean them.

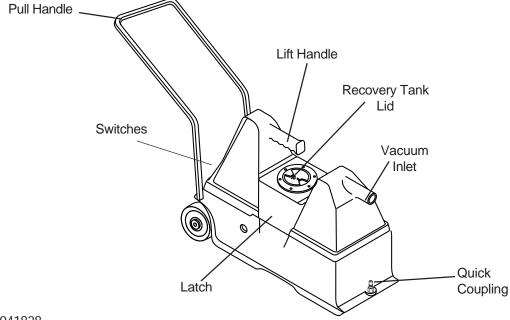

56380588

240V

SPECIFICATIONS:

Solution Tank: 1 gallon

Rinse Tank: 1 gallon

Recovery Tank: 2.5 gallons

Pump: 55 PSI

Tangential Vacuum: 90-inch lift/97 CFM

Power Cable: 25-foot length 18/3 w/hospital grade plug

Hand Tool: 3.5-inch stainless steel/clear resin


Transport: 5-inch wheels w/folding handle

Weight: 29 lbs.

Dimensions: 25" L x 10.5" W x 19" H

Warranty: 2-year, limited

Optional Equipment: Lightweight floor wand

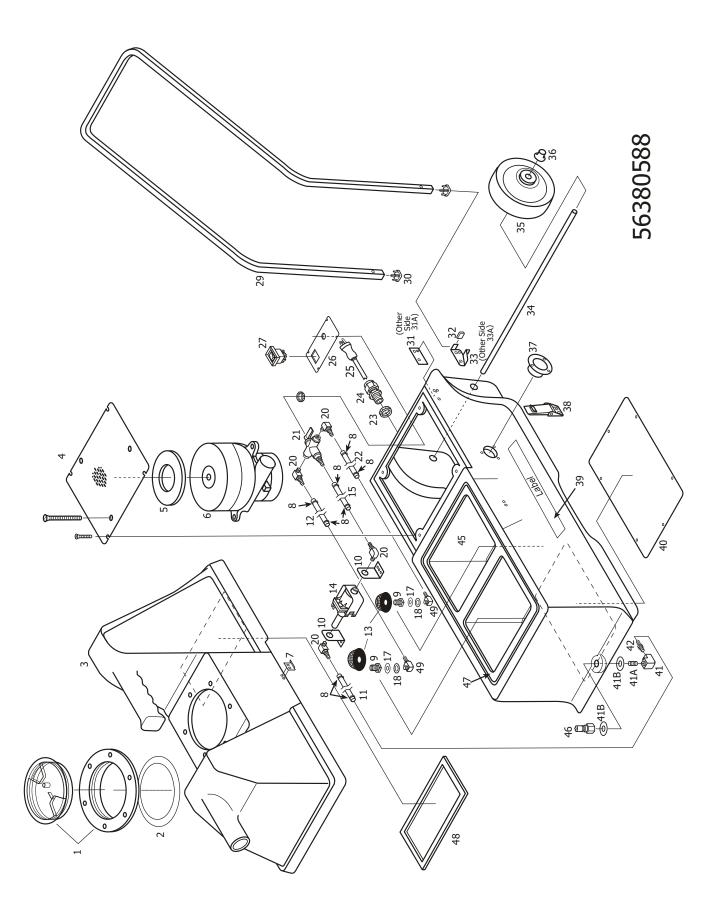

6 - FORM NO. 56041828 3-2011

56380588 Part List 240V

ITEM	PART	DESCRIPTION	ITEM	PART	DESCRIPTION
1	983	Lid, with ring	26	987	Switch plate
2	1074B	Gasket, for lid	27	FP578	Switch, rocker, OFF/ON
3	VT-22-1	Vacuum Tank	29	991	Handle
4	994	Plate, vacuum motor mounting	30	389	Plug, square, plastic
5	2013	Gasket, Vacuum motor	31#	993	Bracket, handle set (left) inside & outside
6#	FP384	Vacuum motor kit	31A#	992	Bracket, handle set (right) inside & outside
7	909A	Strike, latch	32	997	Cover, for handle stop, plastic
8	385	Clamp, hose	33#	993	Bracket, handle set (left) inside & outside
9	97	Bushing, brass	33A #	992	Bracket, handle set (right) inside & outside
10	990	Bracket, pump mounting	34	910-1125	Axle rod
11	996	Hose, 41 cm, braided	35#	39857A	Wheel
12	996	Hose, 57 cm, braided	36	27A	Axle Cap
13	999	Filter, 40 mesh, pump inlet	37	440	Exhaust flange
14	989A	Pump, solution	38#	56471194	Latch Assembly
15	996	Hose, 27 cm, braided	39	2318	Label
16#		Deleted	40#	986	Cover, bottom
17	357	Washer, S/S	41#	90	Elbow, brass
18	265	Washer, rubber	41A	383	Nipple, brass
19	990	Hose, 56 cm, braided	41B	306AB	Washer, brass
20	1000	Elbow/Hose barb, nylon	42	384	Hose barb, brass
21	988B	Valve, 3-Way, with nut	45 #	HT-10	Holding Tank
22	996	Hose, 57 cm, braided	46	374	Quick Disconnect
23	230A	Washer, plastic	47	981	Gasket, on top of base
24	230	Retainer, power cord, water tight	48 #	980	Gasket, under Vac tank
25	2019	Power cord, 8 M	49#	56755726	Hose Barb 1/4 Barb x 1/8-27
15 16# 17 18 19 20 21 22 23 24	996 357 265 990 1000 988B 996 230A 230	Hose, 27 cm, braided Deleted Washer, S/S Washer, rubber Hose, 56 cm, braided Elbow/Hose barb, nylon Valve, 3-Way, with nut Hose, 57 cm, braided Washer, plastic Retainer, power cord, water tight	39 40# 41# 41A 41B 42 45# 46 47 48#	2318 986 90 383 306AB 384 HT-10 374 981	Label Cover, bottom Elbow, brass Nipple, brass Washer, brass Hose barb, brass Holding Tank Quick Disconnect Gasket, on top of base Gasket, under Vac tank

= Revised or new since last update

3-2011 FORM NO. 56041828 - 7

56380588

240V

NOTES: