




XLT-60 EXTRACTOR 240V

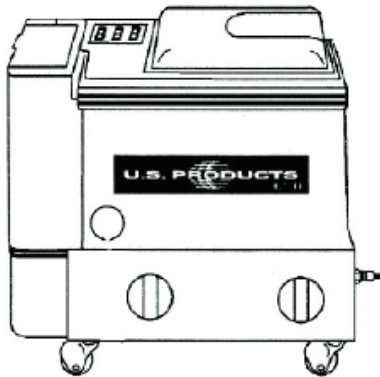

INFORMATION & OPERATING INSTRUCTIONS



**DO NOT OPERATE MACHINE UNTIL YOU HAVE READ
ALL SECTIONS OF THE INSTRUCTIONS
IMPROPER USE OF THE MACHINE WILL VOID THE WARRANTY**

1. **NEVER USE SOLVENT IN THE MACHINE.** Use neutral pH, water-based products only!
2. Never use water with a temperature above 54 °C/130 °F in the solution tank.
3. The recovery bucket should be emptied each time the holding tank is filled.
4. Always make sure the float travels freely up and down the rod after emptying the recovery bucket.
5. Always use a drop cloth under the machine during operation.
6. Vacuum any unused solution out of the solution tank and empty the recovery bucket after each job.
7. Keep machine from rain and snow, extremes in temperatures, and store in a heated location. Use the machine indoors. Do not use outdoors.
8. Do not run the pump dry.
9. Never operate a machine that is leaking or in need of a repair.
10. Always use a defoamer. The vacuum shut-off will not activate properly if foam is in the recovery bucket. Water damage to the vacuum motor or other components will void the warranty.

If you have any questions before you operate the machine, call your supplier for instruction.

IMPORTANT SAFETY INSTRUCTIONS

This machine is only suitable for commercial use, for example in hotels, schools, hospitals, factories, shops, and offices other than normal residential housekeeping purposes.

When using any electrical appliance, basic precautions should always be followed, including the following:

NOTE: Read all instructions before using this machine.

WARNING!

To reduce the risk of fire, electric shock, or injury:

- Do not leave the machine unattended when it is plugged-in. Unplug the unit from the power outlet when not in use.
- Unplug the machine from the power outlet before cleaning or servicing.
- To avoid electric shock, do not expose to rain or snow. Store, and use, indoors.
- Do not allow to be used as a toy. Close attention is necessary when used near children.
- Use only as described in this manual. Use only the manufacturer's recommended attachments.
- Inspect the power cord regularly for damage, such as cracking, ageing, or damaged insulation. Replace the power cord with the same type as original if any damage is found. Do not use with damaged cord or plug.
- Do not use the power receptacles on the machine for any use other than to operate the machine.
- If the machine is not working as it should, has been dropped, damaged, left outdoors or flooded with water, return it to a service center.
- Do not pull the machine by the cord, do not use the cord as a handle, close a door on the cord, or pull the cord around sharp edges or corners. Do not run the machine over the cord. Keep the cord away from heated surfaces. To unplug, grasp the plug, not the cord.
- Do not handle the plug, the cord, or the machine with wet hands.
- Extension cords must be 12/3 and no longer than 50 feet. Replace the cord or unplug immediately if the ground prong becomes damaged.
- Do not put any object into openings. Do not use with any opening blocked; keep free of dust, lint, hair, and anything that may reduce air flow.
- Keep loose clothing, hair, fingers, and all parts of body away from openings and moving parts.
- Do not pick up anything that is burning or smoking, such as cigarettes, matches, or hot ashes, or any health endangering dusts. Do not use to pick up flammable or combustible liquids such as gasoline or use in areas where they may be present.
- Turn off all controls before unplugging.
- Use extra care when cleaning on stairs.
- Liquid ejected at the spray nozzle could be dangerous as a result of its temperature, pressure, or chemical content.

INSPECTION:

Carefully unpack and inspect your XLT-60 for shipping damage. Each machine is tested and inspected before shipping. Any shipping damage incurred is the responsibility of the carrier. You should notify the carrier immediately if you notice damage to the box or to the machine or parts.

CLEANING SOLUTIONS:

We recommend liquid cleaning chemicals. Powders may be used, but, unless mixed very thoroughly, powder can cause build-up in the lines, pump, valves, and quick disconnects. A pH of 5-10 is strongly recommended to avoid premature wear to the pump and/or seals. Accelerated wear from inappropriate chemical use is not covered by warranty.


MAINTENANCE:

For optimum performance, flush the machine with clear water at the end of each working day. Once a month, minimum, run a flushing compound through the machine to break up any mineral or chemical build-up that may have formed.

Clean the float rod each time the recovery bucket is emptied. Inspect the filters regularly and clean as needed. The vacuum filter is located under the recovery bucket. The solution filter is located at the bottom of the holding tank.

The quick disconnects and castors can be lubricated with a penetrating spray lubricant. Fine steel wool will keep the brass quick disconnects shining. An auto interior spray cleaner/protectant will work well to keep the body clean and bright.

SWITCH PLATE:

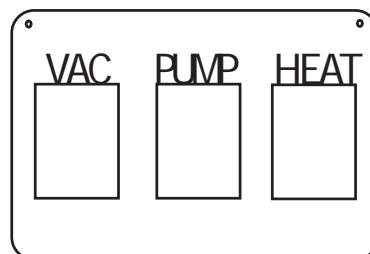

WATER HEATING:

Turn on the Heater switch. Wait two minutes for the heater to heat the water to about 93 °C



CAUTION: Use a rag or glove to disconnect brass fittings. Fittings are very hot and may cause minor burns.

AUTO VAC SHUT-OFF:

When the recovery bucket is full, the vacuum motor will automatically shut off. **NOTE:** the float will not operate properly with foam in the tank. Always use defoamer anytime foam is present to prevent damage to the vacuum motor.

DANGER: unplug the XLT- 60 from the electrical outlet before cleaning or maintaining. Certain internal components are electrically live, even with switches in their OFF position.

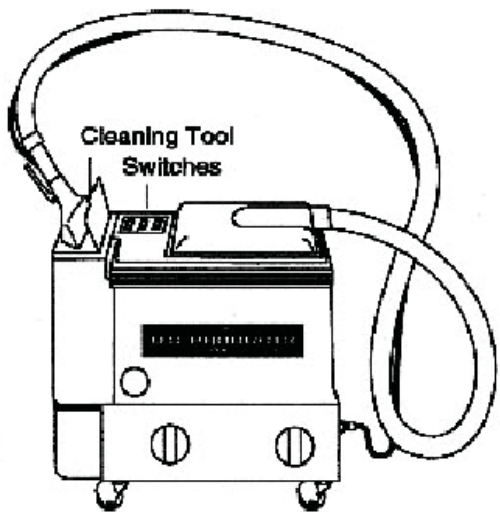


FIG. A

STEP #1

Make sure the recovery bucket under the dome is in the correct position. If the dome will not seat properly, lift off the dome, and see if the bucket needs to rotate 180 degrees. The bucket must set level; the float rod should be next to the switches.

STEP #2

Connect hoses to machine: Slide the hose cuff on one end of the vacuum hose into the hole in the dome (FIG A). Connect the other end of the hose to your cleaning tool. Connect one end of your solution hose to the male quick disconnect on the end of the machine. Connect the other end of the hose to the tool.

STEP #3

Fill the holding tank with cleaning solution to the desired level. NOTE: the solution must be at least 3" above the filter in the bottom of the tank.

STEP #4

Position the cleaning tool over the holding tank (FIG A). Pull the trigger on the tool, and turn the pump switch on. When solution begins to spray, release the trigger.

STEP #5

Turn the heater switch on. Wait two minutes, and again hold the tool over the holding tank. (FIG A.) Spray for 15 seconds to heat the lines and the tool. Wait 30 seconds, then spray again for 15 seconds.

STEP #6

Turn the vacuum switch on. NOTE: all switches should be on now. Begin cleaning (FIG B).

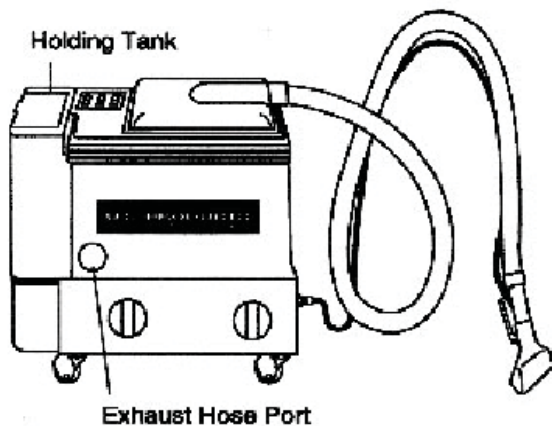


FIG. B

STEP #7

When the recovery bucket is full, the vacuum will turn-off. Turn off the vacuum switch. Remove the dome cover. Lift out the bucket (FIG C), and empty it (FIG D).

STEP #8

Dry any liquid in the bucket housing area before replacing the bucket. Make sure the float in the bucket is clean and can freely travel up the rod. Reinstall the dome lid. Begin cleaning again.

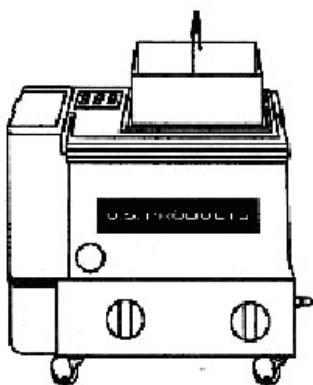



FIG. C



FIG. D

⚠ CAUTION: ⚠
DO NOT LET THE PUMP RUN DRY.
ALL EXTENSION CORDS MUST BE 12/3, AND NOT LONGER THAN 50 FT.

REPLACE THE PLUG END IMMEDIATELY IF ANY OF THE THREE PRONGS BECOMES DAMAGED

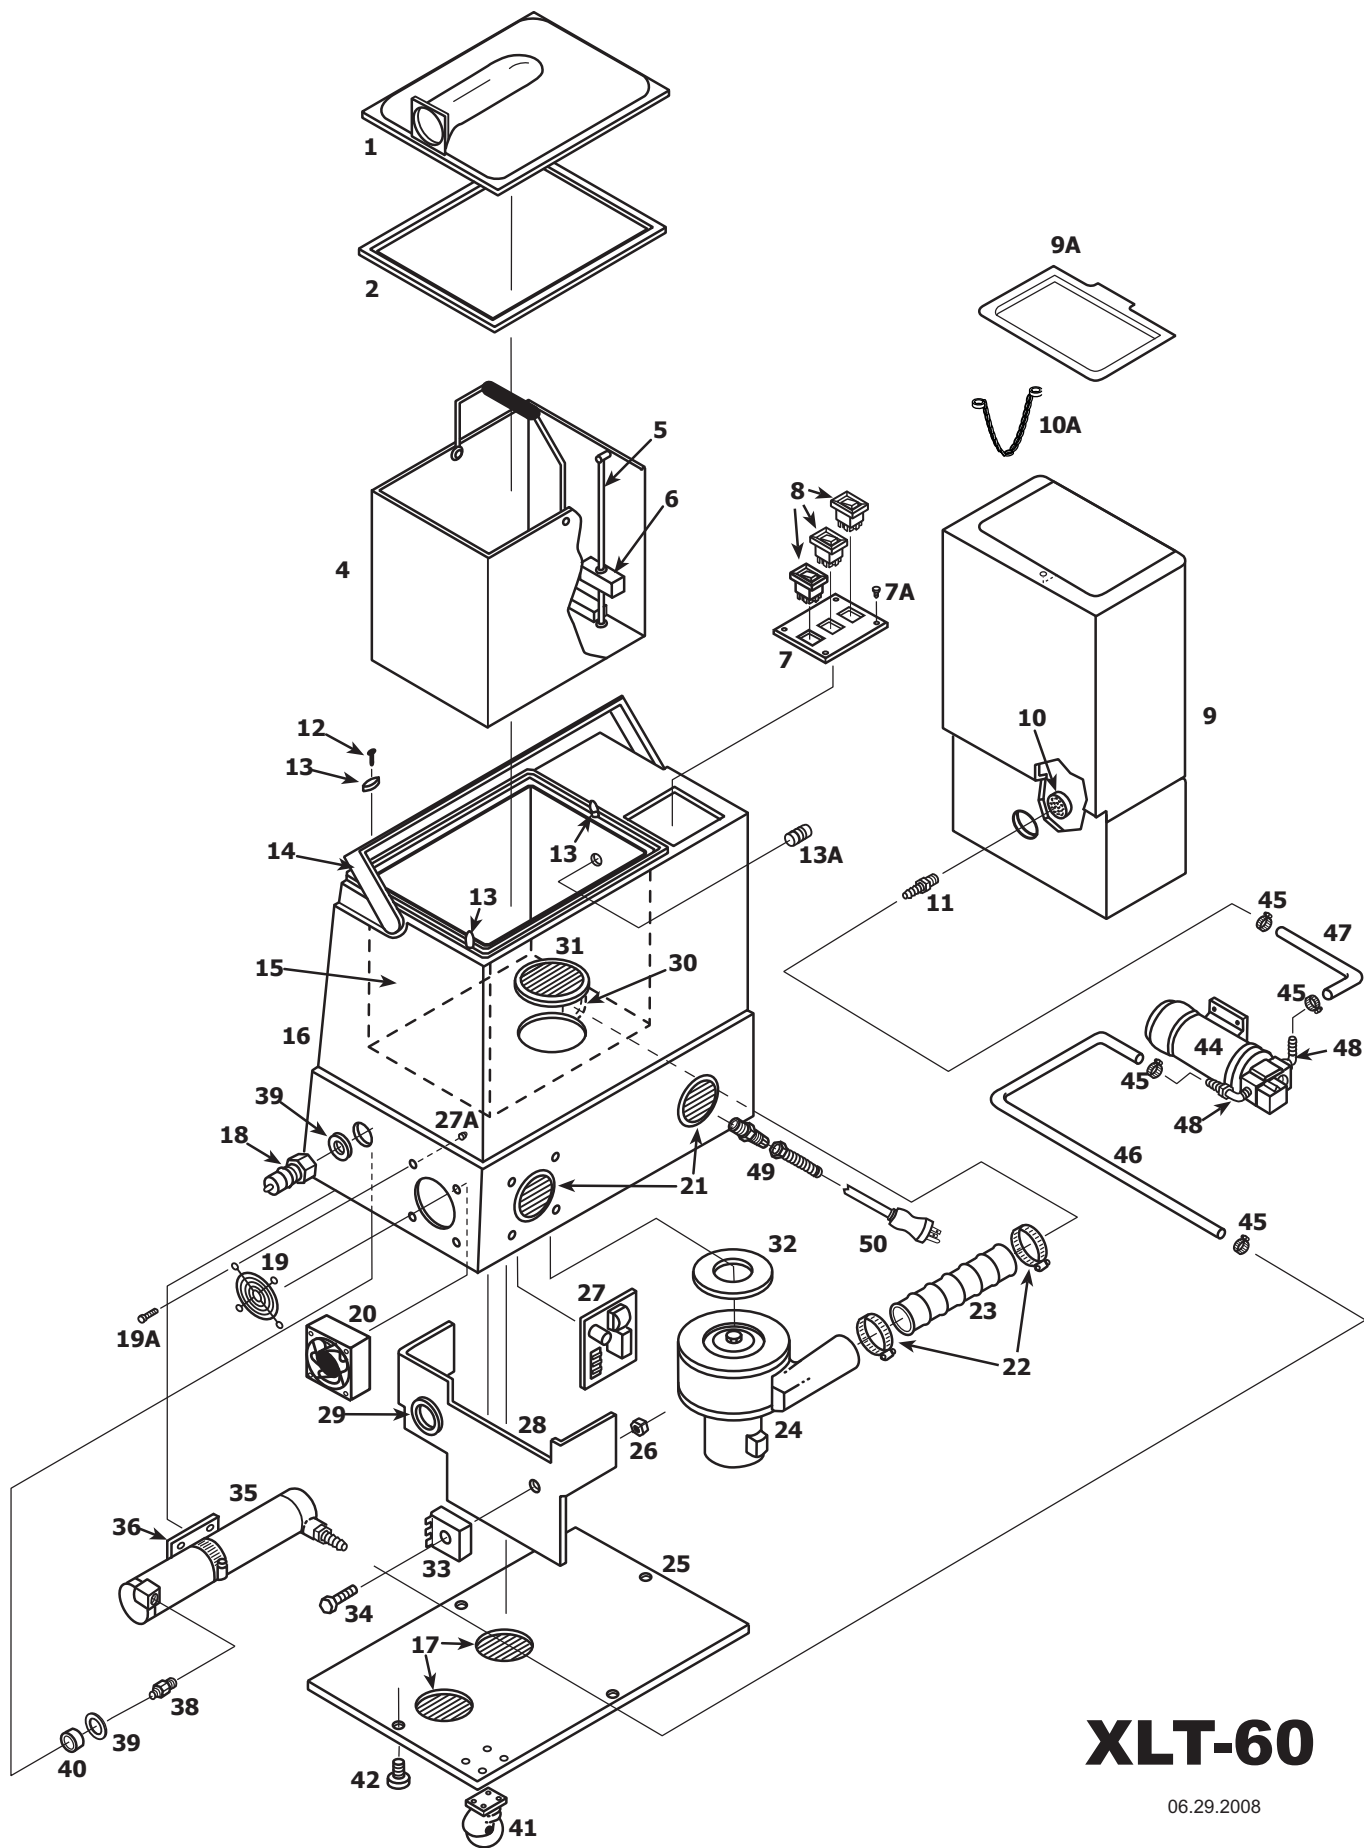

XLT-60

06.29.2008


XLT-60 240V

PARTS LIST

<u>ITEM#</u>	<u>PART#</u>	<u>DESCRIPTION</u>	<u>ITEM#</u>	<u>PART#</u>	<u>DESCRIPTION</u>
#1	FP368	Vacuum Dome, no Gasket	#27B	16	Nut, Nylon
#2	439	Gasket for Dome	#28	429	Heat Sink Plate
#3	420	Handle, Recovery Bucket	#29	86	Grommet
#4	FP147	Recovery Bucket, Complete	#30	440	Flange, Exhaust
#5	421	Float Rod	#31	FP487	Filter, Exhaust,
#6	FP184	Float Assembly	#32	419	Gasket, Vacuum Filter
#7	2056	Switch Plate, empty	#33	409B	Relay, Vacuum (240V)
#7A	28	Screw, #4 x 3/8", S/S	#34	138	Bolt, 1/4" x 1 1/4"
#8	FP578	Switch, Rocker with Cover	#35	FP138B	Heat Exchanger, Complete
#9	HTXLT-W	Holding Tank, White	#36	455	Heat Exchanger Mount
#9A	2058	Lid, Solution Tank	#38	105	Reducer Nipple,
#10	207	Filter, Pump Inlet	#39	115	Washer, Fiber
#10A	805	Chain	#40	116A	Washer, Fiber
#11	164	Hose Barb, m.p.t.	#41	418	Castor, Swivel
#12	19	Screw, Twist-Lock	#42	29	Screw, 1/4-20 x 1/2"
#13	450	Twist-Lock	#43	208	Hose Barb
#13A	123	Reed Switch	#44	2017	Pump (240V), 7 bar
#14	424	Handle, Black Powder Coated	#45	166	Hose Clamp,
#15	431	Vacuum Chamber	#46	FP166B	Hose, Pump to Heater,
#16	FP440	Body, Black, Complete	#47	FP169A	Hose, Pump Inlet
#17	928	Louver, (Includes Screws)	#48	108B	Hose Barb/Elbow
#18	45	Quick Disconnect, Male, 1/4 p.t.	#49	184	Cord Retainer
#19	410	Guard,Fan	#50	2019	Power Cord
#19A	2B1	Screws, 6/32" x 2" S/S (Fan)			
#20	411	Fan, Cooling (240V)			
#21	459	Louver, 2-1/2", Includes Screws			
#22	156	Hose Clamp, " (w/Screws)			
#23	FP163	Exhaust Hose			
#24	FP384	Vacuum Motor, with connectors			
#25	FP137	Castor Plate, Complete			
#26	8	Nut, 1/4-20			
#27	413-1	Heat Control Board			

WIRING:

**XLT-60
240**

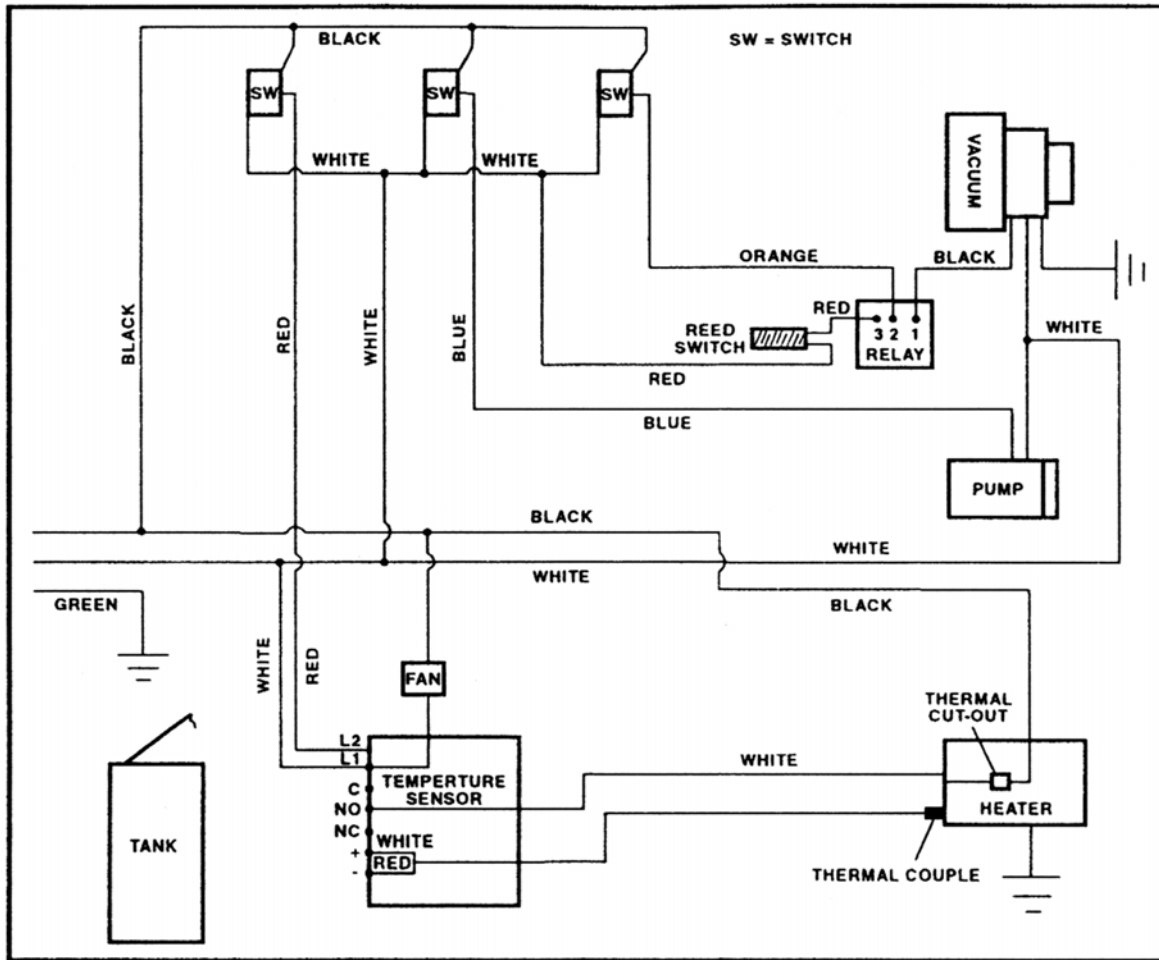

SPECIFICATIONS:

- Vacuum: 80" water lift - 97 CFM
- Heat Exchanger: Stainless steel coil, instant heat transfer
- Pump: 7 bar (100 psi) diaphragm, "on-demand"
- Circuit Board: Solid-state technology controls heating operation
- Electrical System: 7.6 M 12/3 cord 240V 50/60 cycle
- Weight: 19.5 Kg
- Dimensions: 58L x 56H x

**XLT-60
EXTRACTOR
240V**

NOTES:



425-322-0133 / 800-257-7982 / FAX: 425-322-0136
11015 - 47th Ave. W. / Mukilteo, WA 98275
VISIT US AT: <http://www.usproducts.com>